

84H314610-003

Tool-Less Sliding Rail Installation Guide



Compatible Chassis


- RM245
- RM238
- RM146+
- RM143
- RM133

Features


- For rack length 660 mm (min) to 840 mm
- Travel distance: 560 mm
- Maximum weight: 30 kg (66 lbs)

Removing Inside Rail

- Start removing the inner rail by pulling it out as far as it will go (until it catches).
- Next, pull back the white latch indicated in the second image while pulling out the inner rail.
- The inner rail should now be separated from the outer rail.

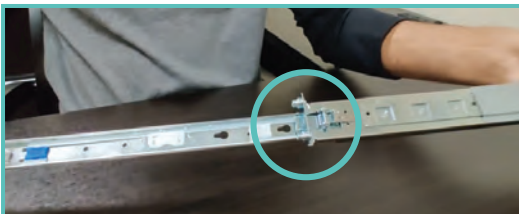

Pull this latch to release the inner rail

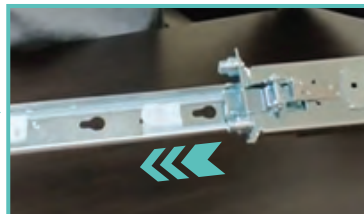

Pull on the latch



Remove the inner rail

Attaching Inside Rail onto the Chassis

- Align the large holes on the inside rail to the end pins on the chassis.
- Slide the rail so that the holes on chassis lock on to the end pins.
- Ensure that the screw hole on chassis is visible through the hole on the rail.




Screw Inside Rail to the Chassis

- Insert the screws shown in the picture through the slide rail and into the holes on the chassis.
- Repeat for the rail on the other side.



Attaching Slide Rail to Rack

- Before attaching the outer slide rail to the rack, first check that the gray slider on the inner side is lined up and latched to the front of the bracket.
- If it is not latched to the front of the bracket, slide it toward the front until it clicks and latches on.

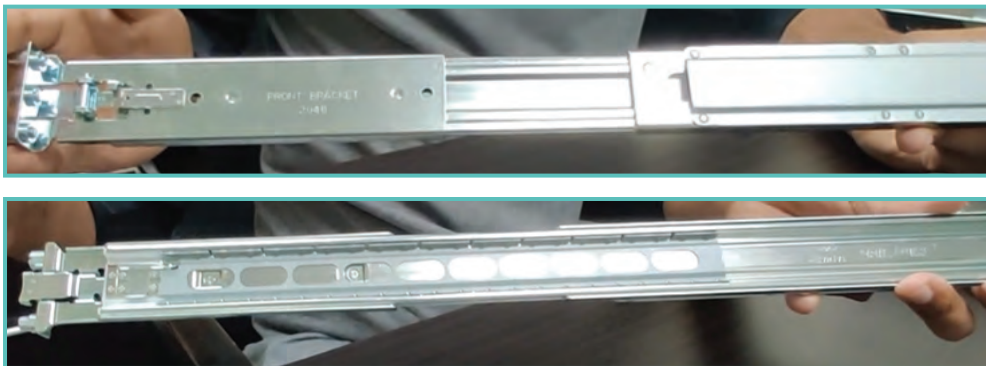

- No tools are required to attach the slide rail to the rack.
- First, place the front of the outer rail against the front of the rack, align the screws on the rail to the rack, and pull back the latch as shown in the image. Insert the screws into the rack and release the latch. The screws should stay in place when the slide rail is pulled.
- Follow the same procedure for the rear and other side of the rack.



Pull this latch back, insert screws in the holes, and then release the latch.

Slide the Chassis into the Rack

- Align the rail on chassis to the rail on the rack.
- Pull the blue latches on the chassis rail toward you as shown, and then slide the chassis into the rack.
- To ensure that the chassis is secure in the slide rail, pull it from the rack and check that it stops when the white latches become visible.



Chassis is secure if it stops in the position shown.

Removing Chassis from the Rack

- To remove the chassis, pull the blue latches to unlock it and then slide it out of the rack.



Chassis is secure if it stops in the position shown.